


Riley Curtain Rod Installation Instruction

PARTS INCLUDED

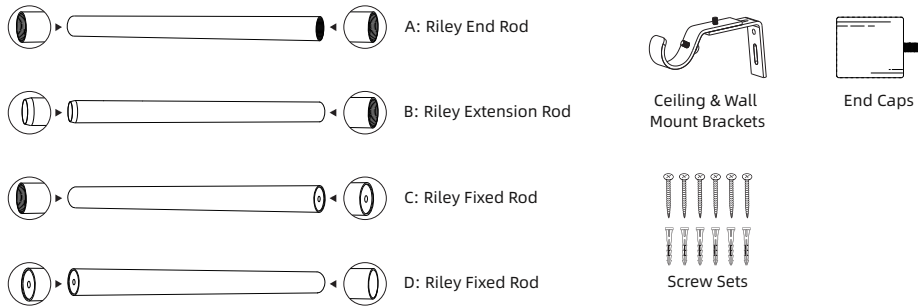

Rod Length	A: End Rods	B: Extension Rod	C&D: Fixed Rods	End Caps	Brackets
18" - 28"	—	—	2 pcs	2 pcs	2 pcs
28" - 48"	1 pcs	1 pcs	2 pcs	2 pcs	3 pcs
28" - 84"	1 pcs	3 pcs	2 pcs	2 pcs	3 pcs
28" - 120"	1 pcs	5 pcs	2 pcs	2 pcs	3 pcs
28" - 144"	1 pcs	7 pcs	2 pcs	2 pcs	3 pcs
28" - 190"	1 pcs	9 pcs	2 pcs	2 pcs	3 pcs

NECESSARY TOOLS



1 LENGTH ADJUSTMENT

Use a metal tape measure to measure the total length required for your installation.

Install the fixed rod first, then connect the extension rod. Adjust until the rod reaches your desired length.




2 ADJUST BRACKET PROJECTION

Riley brackets support both ceiling and wall mount installations.

Adjust the distance between the rod and the wall or ceiling by repositioning the top screw on the bracket.



Allow sufficient clearance based on your curtain's pleat depth for proper drape.

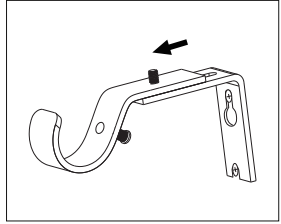

3 MARK AND INSTALL BRACKETS

Mark the bracket mounting points at your desired rod location, making sure they are level.

Drill pilot holes, insert the anchors, then secure the brackets with screws using a screwdriver.

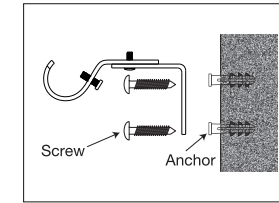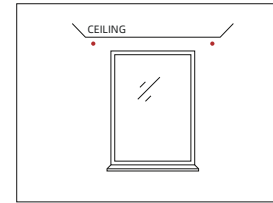

4 INSTALL THE ROD

Start by placing the rings onto the rod. We recommend positioning one ring close to each end to prevent the drapery from being pulled all the way to one side.

Loosen the screws on the back of the brackets, set the rod in place, then tighten the screws to secure it. Finish by attaching the end caps on both sides.

