



Installation Video & Product Support

Scan the QR code below



We're Here to Help!

If you need assistance with installation,
feel free to reach out to us anytime.

✉ | Email: care@cozyology.com



Tatum Track

Installation Instructions

Crafted for the Place You Love Most

www.cozyology.com

Tatum Motorized Track Installation Instructions

PARTS INCLUDED

TRACK SECTIONS | BASED ON ORDERED LENGTH



39 3/8" Track Section



19 3/4" Track Section



7 7/8" Track Section



3 7/8" Track Section


Track Length (in)	Included Sections	Brackets (Ceiling & Wall)	Pleated Runners	Ripple Fold Runners
39"-123 1/2"	2 x 39 3/8" + 19 3/4" + 2 x 7 7/8" + 3 7/8"	5 Sets	45 Runners	70 Runners
39"-202 1/2"	4 x 39 3/8" + 19 3/4" + 2 x 7 7/8" + 3 7/8"	7 Sets	75 Runners	105 Runners
39"-320 1/2"	7 x 39 3/8" + 19 3/4" + 2 x 7 7/8" + 3 7/8"	12 Sets	120 Runners	168 Runners

TRACK COMBINATION CHART

RUNNERS | ONE TYPE BASED ON YOUR ORDER



Ripple Fold - Tape Buckle Runners




Pleated - Curtain Runners


OTHER HARDWARE




Drive belt

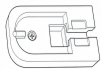


Motor A

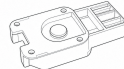

Motor B

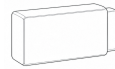

Motor

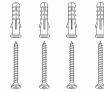

Screws and wall anchors




Ceiling Bracket



Wall Bracket




Double-Track Bracket

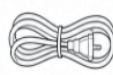

Power Cord



Pleated Master Carriers



Ripple Fold Carrier - Single Panel



Ripple Fold Carriers - Split Panel

NECESSARY TOOLS



Pencil



Drill




Screwdriver




Metal Tape Measure

1 TRACK ASSEMBLY


- **Orient the Track Sections** Before joining the track sections, place all sections with the shallower mounting channel facing upward. Make sure the openings and channels face the same direction.
- **Align the Track Sections** Align the track ends, then slide the connector halfway into each section. Tighten the connector screws evenly with the included hex key. The joint and inner channels must be straight, smooth, and flush. If needed, loosen the screws, realign the sections, and retighten.
- **Secure the Connector** Tighten the connector screws evenly with the included hex key. The joint and inner channels must be straight, smooth, and flush. If needed, loosen, realign, and retighten.
- **Measure and Cut the Drive Belt**
Split Panel: cut two belts, each equal to the track length plus 4 in.
Single Panel: cut one belt equal to twice the track length plus 9 1/2 in.

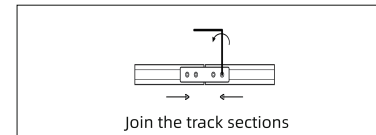


Join the track sections

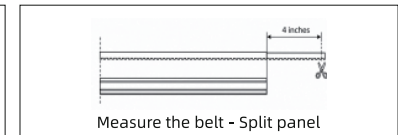

Measure the belt - Split panel

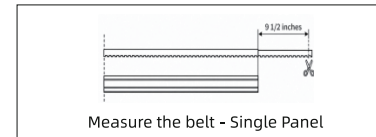

Measure the belt - Single Panel

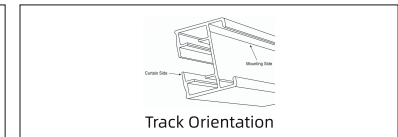


Track Orientation

2 MASTER CARRIER ASSEMBLY


Pleated and Ripple Fold curtains follow the same basic method; carrier components vary slightly.

- **Disassemble the Master Carrier** Remove the screw, crossover arm, and small metal washer. Slide the white carrier base straight out.
- **Attach the Drive Belt** Press the belt end into the toothed buckle until fully locked. Tug lightly to confirm it is secure, then slide the buckle into the carrier slot and reassemble the carrier.
- **Position the Belt and Carrier** Follow the component markings. The drive belt runs in the two outer channels; the curtain carrier runs in the center channel.


NOTE: Keep the belt flat and free of twists.

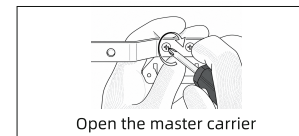


Open the master carrier

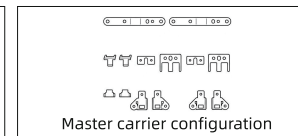


Master carrier configuration

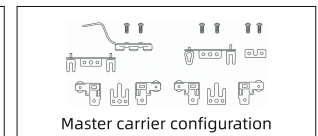


Master carrier configuration

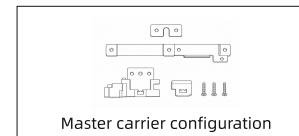

Master carrier configuration

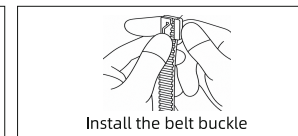

Install the belt buckle

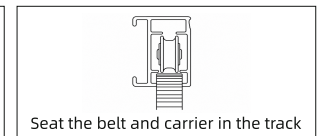


Seat the belt and carrier in the track

Tatum Motorized Track Installation Instructions


3 RUNNERS INSTALLATION & ADJUSTMENT

A. Split Panel

- ▶ Label the track end A/B and the belt ends a/b/c/d.

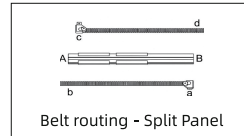

- ▶ **Belt End a** Attach end a to the master carrier. Insert it at track ends A, then guide the belt through the outer channel and out at track ends B.

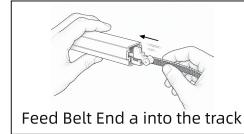




- ▶ **Belt End c** Insert belt end c at track ends B and guide it through the outer channel toward track ends A.

- ▶ **Motor A** Feed belt end b through Motor A. Attach the buckle and carrier, then slide the assembly into track ends A and lock the motor.

- ▶ **Motor B** Feed belt end d through Motor B. Attach the buckle and carrier, then slide the assembly into track ends B and lock the motor.


- ▶ **Connect the Carriers** Snap the metal connector plate into both master carriers.

- ▶ **Secure the Assembly** Insert the screw through the crossover arm, connector plate, and washer. Tighten securely.

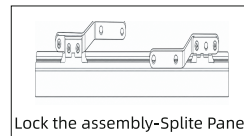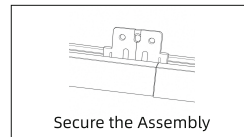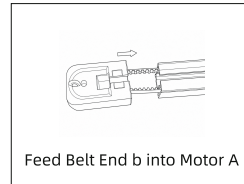


B. Single panel

- ▶ Label the track end A/B and the belt ends a/b.

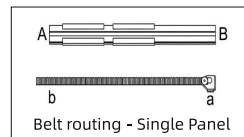

- ▶ **Belt End a** Insert belt end a at track ends A. Keep the belt in the outer channel and the master carrier in the inner channel.

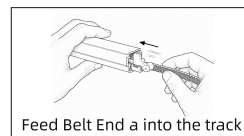




- ▶ **Motor A** Feed belt end b through Motor A. Adjust the belt and carrier, then lock the motor at track ends A.

- ▶ **Route to Motor B** Insert end belt end b at track ends A and guide it through the track until it exits at track ends B. Feed it through Motor B.

- ▶ **Motor B** Attach the buckle and carrier to belt end b. Slide the assembly into track ends B and lock the motor.

- ▶ **Connect the Carriers** Snap the metal connector plate into both master carriers.

- ▶ **Secure the Assembly** Insert the screw through the crossover arm, connector plate, and washer. Tighten securely.

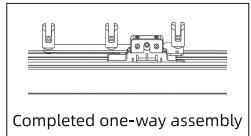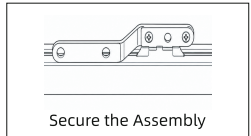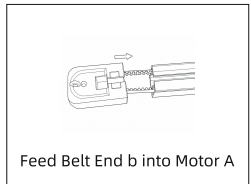

4 RUNNERS INSTALLATION & ADJUSTMENT

- ▶ **Preparation** For split-draw Ripple Fold curtains, count the hooks on each panel and cut the runner cord to the required length.






- ▶ **Insert the Runner** Slide the runners one at a time into the inner channel at Motor End A or B.

- ▶ **Adjust the Runner Quantity** For split-draw curtains, match the runners to the hooks on each panel and divide them evenly between the center carriers. For one-way draw curtains, place all runners on one side of the carrier. Trim any excess Ripple Fold runners

- ▶ **Install the End Stop** Position the end stop and tighten the screw to keep the runners inside the track.

- ▶ **Check the Movement** Move the carriers and runners along the track. Make sure they move smoothly through every joint.

- ▶ **Install the Adjustment Clip** If needed, slide the buckle into the slot at Motor End A to adjust the curtain width.

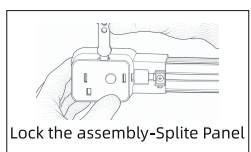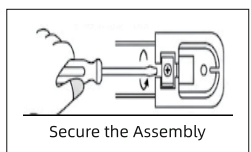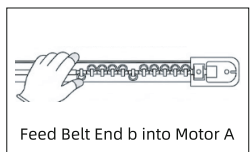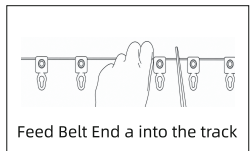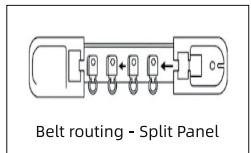

Tatum Motorized Track Installation Instructions

Ceiling mount: follow Section 5A.




◀ Do not follow both sections. ▶

Wall mount: follow Section 5B.

5A TRACK INSTALLATION – CEILING MOUNT




5A - Single Track

- ▶ Place the Brackets Position brackets near both track ends. Space the remaining brackets evenly, 32-39 in. apart, away from joints and moving parts.
- ▶ Install the Brackets Mark and drill the holes. Keep the brackets level, install suitable ceiling anchors, and fasten securely.
- ▶ Install the Track Press the top channel into each bracket until locked. Confirm the track is level, secure, and parallel to the wall.
- ▶ Secure the Track Tighten all bracket screws. Confirm the master carriers and runners move freely.
- ▶ Install the Motor Insert the motor into Track End B. Lock it in place before connecting power and controls.

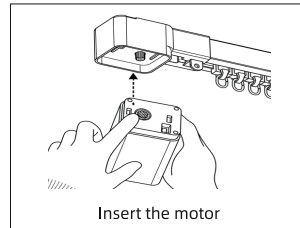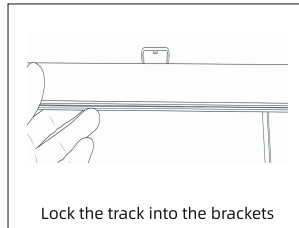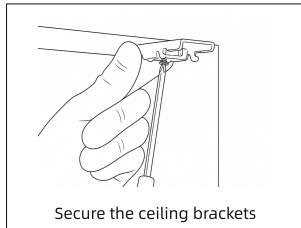

5A - Double Track




- ▶ Confirm Track Spacing Measure the center-to-center distance between the attachment points of the front and rear curtain panels. Use the same center-to-center spacing for the two tracks and the corresponding bracket rows.
- ▶ Place the Brackets Position brackets near both ends. Space the remaining brackets evenly, 32 -39 in. apart, away from joints and moving parts. Keep both rows correctly spaced.
- ▶ Install the Brackets Mark and drill the holes. Keep both rows level, install suitable ceiling anchors, and fasten securely.
- ▶ Install the Tracks Press each track into the brackets until locked. Confirm both tracks are level, secure, and parallel to the wall.
- ▶ Secure the Tracks Tighten all bracket screws. Confirm the master carriers and runners move freely.
- ▶ Install the Motors Insert Motor into Motor B. Lock Motor before connecting power and controls.

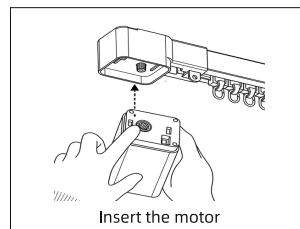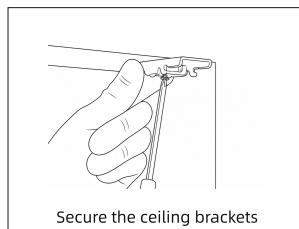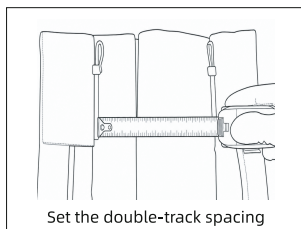

5B TRACK INSTALLATION – WALL MOUNT

5B - Single Track




- ▶ Place the Brackets Position brackets near both track ends. Space the remaining brackets evenly, 32-39 in. apart, away from joints and moving parts.
- ▶ Install the Brackets Mark and drill the holes. Keep the brackets level, install suitable wall anchors, and fasten securely.
- ▶ Install the Track Press the top channel into each bracket until locked. Confirm the track is level, secure, and parallel to the wall.
- ▶ Secure the Track Tighten all bracket screws. Confirm the master carriers and runners move freely.
- ▶ Install the Motor Insert the Motor into Track End B. Lock it in place before connecting power and controls.

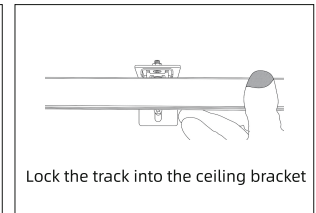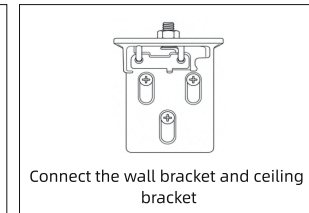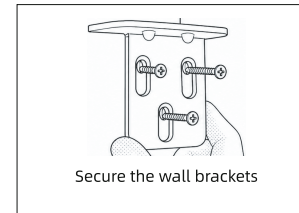

5B - Double Track

- ▶ Confirm Track Spacing Measure the center-to-center distance between the attachment points of the front and rear curtain panels. Use the same center-to-center spacing for the two tracks and the corresponding bracket rows
- ▶ Place the Brackets Space the wall and ceiling brackets evenly, 32-39 in. apart, away from tracoints and moving parts. Maintain the required track spacing.
- ▶ Install the Wall Brackets Mark and drill the holes. Keep the brackets level, install suitable anchors, and fasten securely.
- ▶ Connect the Brackets Fit the ceiling brackets into the wall brackets. Tighten the front and rear screws. Install the Tracks. Snap both tracks into the ceiling brackets. Confirm they are level, secure, parallel, and correctly spaced.
- ▶ Secure the Tracks Tighten all bracket screws. Confirm the master carriers and runners move freely.
- ▶ Install the Motors Insert and lock Motor at Track End B before connecting power and controls.

Note: If all three holes do not align, secure the center and lower holes only. Do not force the upper hole.

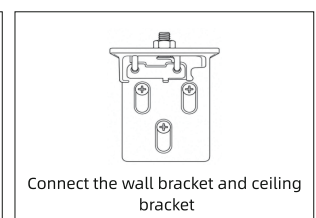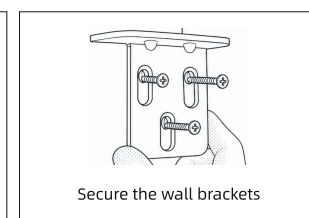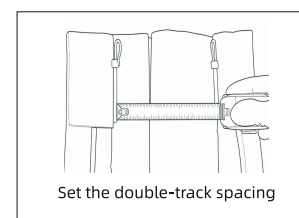

Tatum Motorized Track Installation Instructions



► Pleated curtain: follow Section 6.

► Ripple Fold with Tape Buckles: follow Section 7.

► Ripple Fold with Belt Hooks: follow Section 8.

6 HANG THE CURTAINS – Pleated Curtain



- Attach the first hook to the outermost runners. Insert the remaining hooks into the other runners in order, then secure the final hook to the master carrier arm.
For Split Panel curtains, repeat on the opposite panel.

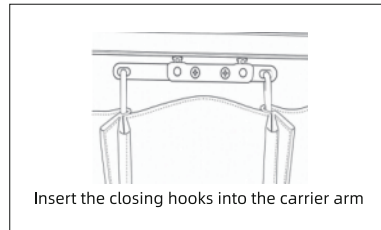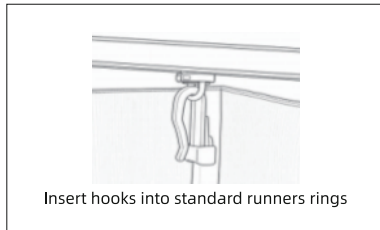

7 HANG THE CURTAINS – Ripple Fold (Tape Buckle)



A. Split Panel

- Attach each tape buckle to a runners opening and press firmly downward until secure.
- Attach the remaining tape buckles to the runners on the master carrier arm.
- Rotate the master carrier hook toward the curtain's return edge so the panels close completely.

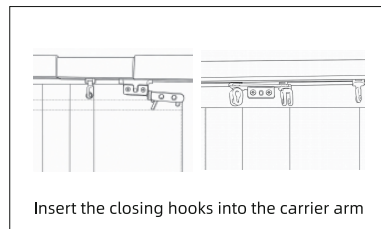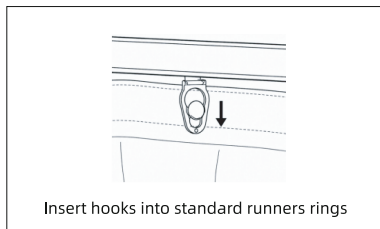

B. Single Panel




- Attach each tape buckle to a runners opening and press firmly downward until secure.
- Attach the remaining tape buckles to the runners on the mastercarrier arm.
- Rotate the carrier runners to follow the curtain's S-shaped folds.

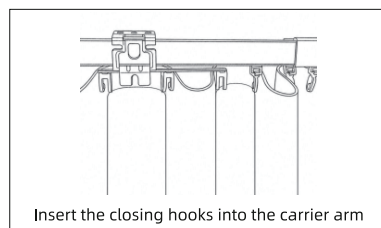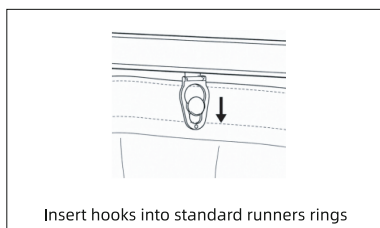

8 HANG THE CURTAINS – Ripple Fold (Belt Hook)



A. Split Panel

- Starting at Track Ends A and B, attach the curtain hooks to the runners toward the center, then connect each panel to its center master carrier.
- Attach hooks to both holes on the shorter carrier arm. On the longer carrier arm, attach the two rear hooks first.
- Align the curtain with the arm to locate the final hook position. Insert the pointed end of the supplied hook upward through the header tape, secure it, then attach it to the end hole of the carrier arm.
- Confirm that all hooks are secure and the curtain panels close completely at the center.

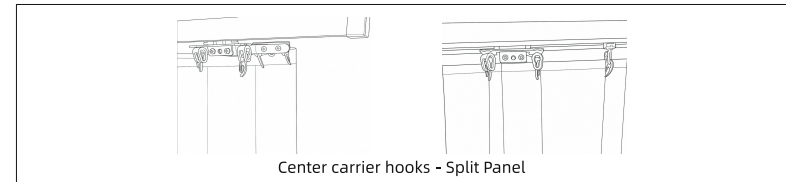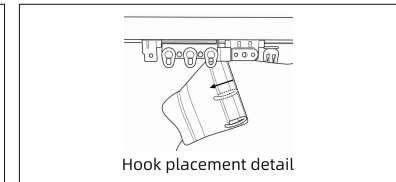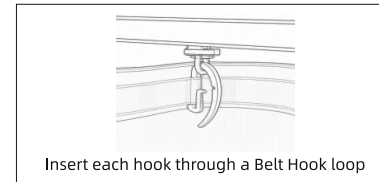

B. Single Panel

- Attach the first hook on each side to a runners.
- Connect the next two hooks to the master carrier in order, then attach the remaining hook directly to the carrier arm.

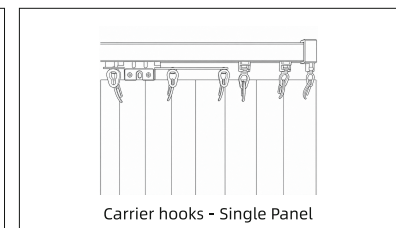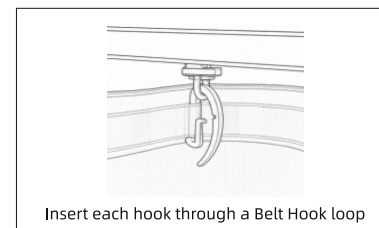

- Final Check: Before connecting power, move the master carriers and runners by hand to confirm that they travel smoothly through every joint. Make sure the drive belt is flat and free of twists. After power is connected, run one complete open-and-close cycle and confirm that the curtain closes fully without binding.