

Step-by-Step Installation Video Tutorials:


Scan the QR code below.



We're Here to Help!

If you need assistance with installation,
feel free to reach out to us anytime.

✉ | Email: care@cozyology.com

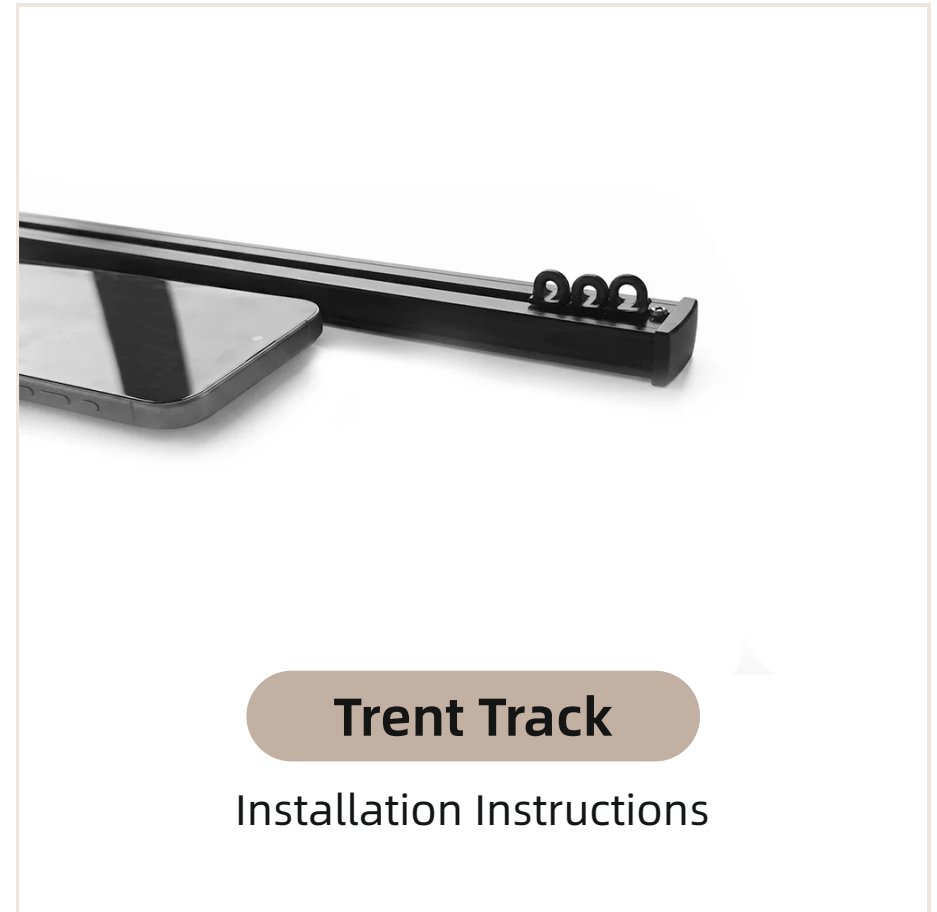

Crafted for the Place You Love Most

Trent Track Installation Instructions

PARTS INCLUDED

TRACK | ONE TYPE BASED ON ORDERED LENGTH



A Sectioned Track (>78")



B One-Piece Track (≤78")

RUNNERS | ONE TYPE BASED ON YOUR ORDER



A Ripple Fold - Tape Buckle



B Ripple Fold - Belt Hook



C Pleated

OTHER HARDWARE



Connector



Wall Brackets



Internal Washers




Ceiling Bracket Clips



Hex Key



Magnetic Covers



Overlap Master Carriers



Screws & Wall Anchors

Note: The connector and hex key are included only with sectioned tracks over 78"; wall-mount brackets, magnetic covers, and internal washers are for wall mount only; overlap master carriers are for split-panel Pleated curtains only.

Track Length (in)	Single-Track Brackets	Double-Track Brackets
12"-90"	2-4	4-8
91"-125"	5-6	10-12
126"-169"	7-8	14-16
170"-216"	9-11	18-22
217"-260"	11-13	22-26
261"-349"	13-17	26-34
350"-393"	17-19	34-38

NECESSARY TOOLS



Pencil



Drill



Screwdriver




Metal Tape Measure

1 TRACK ASSEMBLY

For a one-piece track, skip directly to Step 2.

- Align both track sections with the channels facing the same direction.
- Slide the connector into the joint.
- Tighten the connector screws with the hex key.

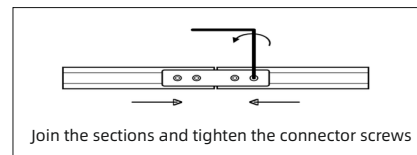


Join the sections and tighten the connector screws


2 RUNNER & HARDWARE ADJUSTMENT | FOLLOW YOUR CURTAIN TYPE

A. Pleated Curtains


- Loosen the finial screws at both ends of the track and remove the finials.
- Add or remove standard runners to match your curtain.
- For split-draw curtains, install the two overlap master carriers at the center with the carrier arms facing outward and the carriers facing each other. No overlap master carriers are needed for a one-way draw.
- For wall mount only: before securing the finial, slide an internal washer into the upper track channel.
- Align the last runner with the hole in the finial, then fasten them together with the screw.
- Push the assembled finial into the track and tighten the screw to secure it.

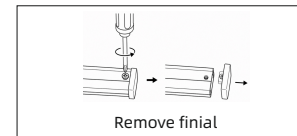


Remove finial

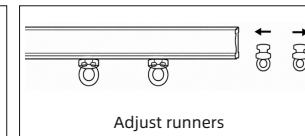


Adjust runners

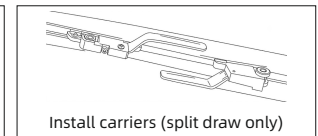


Install carriers (split draw only)

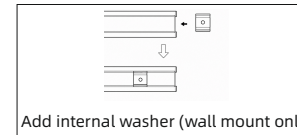

Add internal washer (wall mount only)

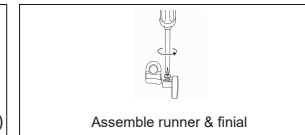


Assemble runner & finial

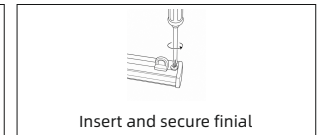


Insert and secure finial

B. Ripple Fold Curtains

- Loosen the finial screws at both ends of the track and remove the finials.
- Split draw: confirm the curtain-hook count, trim off the extra runners, then cut the remaining connecting cord at its center. One-way draw: confirm the hook count and trim off the extra runners, but do not cut the cord at the center.
- Insert the screw stopper between the last two runners and confirm it is seated in the track channel.
- For wall mount only: before securing the finial, slide an internal washer into the upper track channel.
- Push the finial into the end of the track and tighten the finial screw.

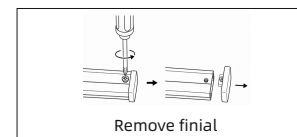


Remove finial

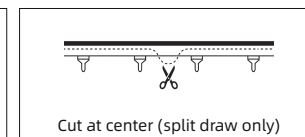


Cut at center (split draw only)



Install screw stopper

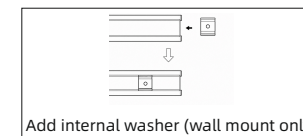

Add internal washer (wall mount only)



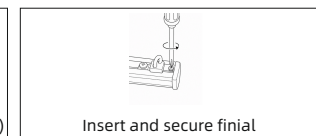


Insert and secure finial

3 BRACKET & TRACK INSTALLATION GUIDE




Option A - Wall Mount

- ▶ Mark the wall-mount bracket positions, keeping all brackets level and evenly spaced. Position each end bracket 2-4" from the end of the track, and keep the maximum spacing between adjacent brackets within 20".
- ▶ Drill at the marked positions. Install expansion screws if needed.
- ▶ Fasten each wall-mount bracket securely with screws.
- ▶ Slide the magnetic cover upward until it fully snaps onto the bracket.
- ▶ Align the track with the wall-mount bracket and the top hole of the internal washer, then tighten the screw to lock the track.

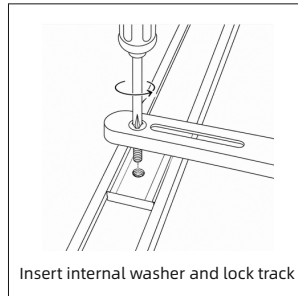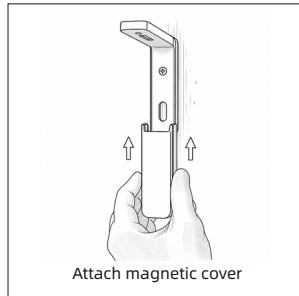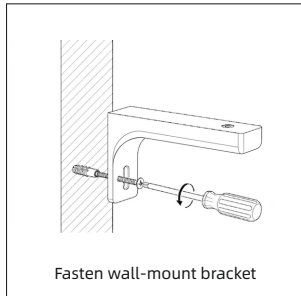

Option B - Ceiling Mount & Double Tracks



- ▶ For double tracks, confirm the required spacing. The inside-to-inside spacing between the two tracks equals the hook-to-hook spacing of the two curtain layers at the same position.
- ▶ Mark the ceiling bracket clip positions in a straight line and space them evenly. Position each end bracket clip 2-4" from the end of the track, and keep the maximum spacing between adjacent bracket clips within 20".
- ▶ Drill at the marked positions. Install expansion screws if needed.
- ▶ Drive the screw through the rear hole of the ceiling bracket clip and secure the clip to the ceiling.
- ▶ Place the track against the back of the ceiling bracket clip, then rotate it counterclockwise to lock.

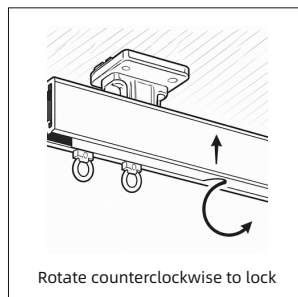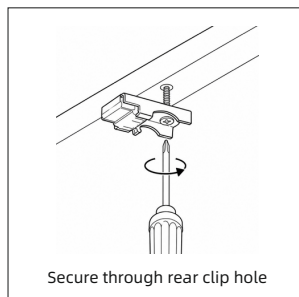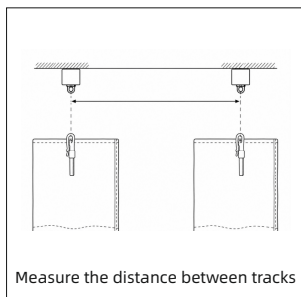

4 HANG THE CURTAINS | FOLLOW YOUR CURTAIN TYPE


A. Pleated Curtains

- ▶ One-way draw: pass all curtain hooks through the regular runner rings; Step 2 is not required.
- ▶ Split draw: pass the standard hooks through the runner rings, then insert the final two hooks near the closing edge into the two holes at the ends of the overlap master carrier arm.

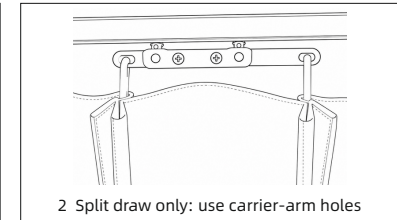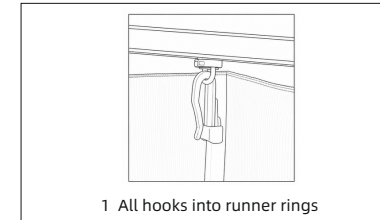

B. Ripple Fold (Belt Hook)

- ▶ Pass each curtain hook through a Belt Hook runner loop, then pull lightly to confirm a secure connection.

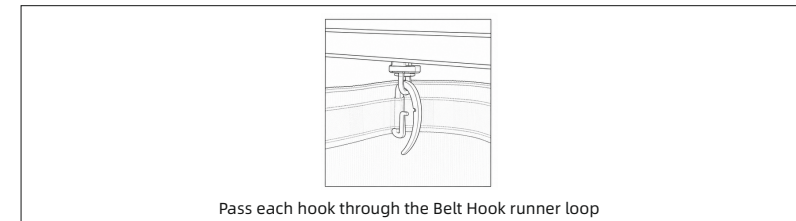

C. Ripple Fold (Tape Buckle)

- ▶ Insert the Tape Buckle through the runner's upper opening, pull it firmly down into the lower hole, then pull the curtain downward to confirm the buckle is locked.

